EG4® WALLMOUNT ALLWEATHER BATTERY

USER MANUAL





©2024 EG4 ELECTRONICS, LLC. ALL RIGHTS RESERVED. VERSION 1.5 | INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE. MODEL #: WPOWER-16/280-AW



TABLE OF CONTENTS

1.	TECH	NICAL SPECIFICATIONS SHEET	1
2.	ABBF	REVIATIONS	3
3.	BATT	ERY SAFETY	4
	3.1	SAFETY INSTRUCTIONS	4
	3.2	IMPORTANT SAFETY NOTIFICATIONS	4
4.	BRIE	F INTRODUCTION	6
	4.1	PRODUCT DESCRIPTION	6
5.	PACK	ING LIST	7
	5.1	BATTERY DIAGRAM	8
6.	LOCA	TION SELECTION AND INSTALLATION	9
	6.1	POWERPRO CONDUIT BOX INSTALLATION	. 11
	6.2	INSTALLATION WITHOUT A CONDUIT BOX	14
	6.3	INSTALLATION WITH A CONDUIT BOX	.15
	6.4	WITH EG4 18KPV INVERTER	18
7.	GENE	RAL INSTALLATION	21
	7.1	BATTERY PARALLELING GUIDE	21
	7.2	BATTERY CABLE CONNECTIONS	22
	7.3	ADDITIONAL CONFIGURATIONS	23
8.	EME	RGENCY STOP (RSD, ESS DISCONNECT)	26
9.	BATT	ERY COMMUNICATIONS	27
	9.1	DIP SWITCH ID TABLE	27
	9.2	LCD SCREEN	28
	9.3	COMMUNICATION PROTOCOL SELECTION	29
10	. OPEF	ATION GUIDE	.31
	10.1	BMS TOOLS INSTALLATION AND INTERFACING	.31
11.	BATT	ERY CHARGING	34
	11.1	BATTERY PERFORMANCE CURVES	35
12	. TROL	JBLESHOOTING, MAINTENANCE & DISPOSAL	36
	12.1	INTRODUCTION TO THE BMS	36
	12.2	BMS PROTECTION	36
	12.3	TROUBLESHOOTING	37
	12.4	BATTERY END OF LIFE	39
13	. EG4 î	O YEAR LIMITED WARRANTY	39
	13.1	WARRANTY EXCLUSIONS	39
14	. STOF	AGE	40

1. TECHNICAL SPECIFICATIONS SHEET

MODULE OPERATING PARAME	TERS				
Parameter	BMS	Reco	mmended Settings		
Total Energy Capacity	14.3kWh @25°C, 100% SOC -				
Voltage	51.2V		-		
Capacity	280Ah ±2%	ež	@25°C ±2°C @ 0.5C		
Charging Voltage (Bulk/Absorb)	56.0V (±0.8V)	56.2V (±0.2V)		
Float	-		54V (±0.2V)		
SOC Cutoff	-		20%*		
Charge Current	200A Max. Contin	uous	60 - 160A		
Discharge Current	200A Max. Contin	luous	160A		
BMS PARAMETERS					
Charge	Spec	Delay	Recovery		
Cell Voltage Protection	3.8V	1 sec	3.45V		
Module Voltage Protection	60V	1 sec	55.2V		
Charge Over-Current 1	>205A	10 sec	-		
Charge Over-Current 2	>225A	3 sec	-		
Temperature Protection	<23°F or >158°F <-5°C or >70°C	1 sec	>32°F or <140°F >0°C or <60°C		
Discharge	Spec	Delay	Recovery		
Cell Voltage Protection	2.3V	1 sec	3.1V		
Module Voltage Protection	44.8V	1 sec	48V		
Discharge Over-Current 1	>205A	10 sec	60 sec		
Discharge Over-Current 2	>300A	3 sec	60 sec		
Short Circuit	2000A	0.1 ms	-		
Temperature Protection	<-4°F or >167°F <-20°C or >75°C	1 sec	>14°F or <149°F >-10°C or <65°C		
PCB Temperature Protection	>230°F (>110°C)	1 sec	@ <176°F (<80°C)		
GENERAL SPECIFICATIONS					
Parameter	9	Spec	Condition		
Cell Balance	120mA	Passive Balance	Cell Voltage Difference >40mV		
Temperature Accuracy	3%	Cycle Measurement	Measure Range: -40°F – ≈212°F (-40°C – ≈100°C)		
Voltage Accuracy	0.5%	Cycle Measurement	Cells & Module		
Current Accuracy	3%	Cycle Measurement	Measure Range: -200 – 200A		
SOC		5%	Integral Calculation		
Power Consumption (Standby)	E>	00uA	Standby/Storage		
Power Consumption (Operating)	<2	25mA	Charging/Discharging		
Communication Ports	RS4	85/CAN	Customizable		
BATTERY HEATER SPECIFICATION	DNS				
Parameter	<u>c</u>	Spec	Condition		
Voltage		56V	-		
Power Consumption	224W -				
Internal Battery Temperature	≤32°F (0°C)) or ≥41°F (5°C)	Heat On/Heat Off		

ENVIRONMENTAL PARAMETERS	
Charging Range	32° to ≈113°F (0°C to ≈45°C)
Discharging Range	-4°F to ≈122°F (-20°C to ≈50°C)
Storage Range	-4°F to ≈122°F (-20°C to ≈50°C)
Ingress Protection	IP65
PHYSICAL SPECIFICATIONS	
Dimensions ($H \times W \times D$)	34.6 × 22.3 × 9.1 in. (88 × 56.6 × 23.2cm)
Weight	308.6 lbs. (140 kg)
Design Life	>15 years
Cycle Life	>8000 Cycles @ 0.5C 80% DOD
Lifetime Production	82.6MWh**
Dimensions (H × W × D) Weight Design Life Cycle Life Lifetime Production	34.6 × 22.3 × 9.1 in. (88 × 56.6 × 23.2cm) 308.6 lbs. (140 kg) >15 years >8000 Cycles @ 0.5C 80% DOD 82.6MWh**

*EG4 recommends this value be set no lower than 20% to maintain the recommended 80% depth of discharge.

**(51.2V×280Ah/1000×80%×8000 cycles/1000)90%=MWh

2. ABBREVIATIONS

- AWG American Wire Gauge
- A Amps
- Ah Amp hour(s)
- AC Alternating Current
- AFCI Arc-Fault Circuit Interrupter
- AHJ Authority Having Jurisdiction
- kAIC kilo-Amp Interrupting Capability
- ANSI American National Standards Institute
- BAT Battery
- BMS Battery Management System
- COM Communication
- CT Current Transformer
- DC Direct Current
- DIP Dual In-line Package
- DOD Depth of Discharge
- EG Equipment Ground
- EGS Equipment Grounding System
- EMC Electromagnetic Compatibility
- EPS Emergency Power System
- ESS Energy Storage System
- E-Stop Emergency Stop
- FCC Federal Communication Commission
- GE Grounding Electrode
- GEC Grounding Electrode Conductor
- GFCI Ground Fault Circuit Interrupter
- GFDI Ground Fault Detector/Interrupter
- Imp Maximum Power Point Current
- IEEE Institute of Electrical and Electronic Engineers
- IP Ingress Protection
- Isc Short-Circuit Current

- In-lbs. Inch Pounds
- kW Kilowatt
- kWh Kilowatt-hour
- LCD Liquid Crystal Display
- LFP Lithium Iron Phosphate
- L1 Line 1
- L2 Line 2
- mm Millimeters
- MPPT Maximum Power Point Tracking
- mV Millivolt
- N Neutral
- NEC National Electric Code
- NEMA National Electrical Manufacturers Association
- NFPA National Fire Prevention Association
- Nm Newton Meters
- NOCT Normal Operating Cell Temperature
- PC Personal Computer
- PCB Printed Circuit Board
- PE Protective Earth
- PPE Personal Protective Equipment
- PV Photovoltaic
- RSD Rapid Shut Down
- SCC Standards Council of Canada
- SOC State of Charge
- STC Standard Testing Conditions
- UL Underwriters Laboratories
- UPS Uninterrupted Power Supply
- V Volts
- VOC Open-Circuit Voltage
- VMP Voltage Maximum Power

3. BATTERY SAFETY

3.1 SAFETY INSTRUCTIONS

Before any work begins, carefully read all safety instructions, and always observe them when working on or with the battery. The installation must follow all applicable national or local standards and regulations. Consult with the local AHJ to obtain the proper permits and permissions before installation.

Incorrect installation may cause:

- Injury or death to the installer, operator or third party
- Damage to the battery or other attached equipment

3.2 IMPORTANT SAFETY NOTIFICATIONS

DANGER: Hazardous Voltage Circuits! AVERTISSEMENT! Circuits à tension élevée!

There are various safety concerns that must be carefully observed before, during, and after the installation, as well as during future operation and maintenance. The following are important safety notifications for the installer and any end users of this product under normal operating conditions.

- 1. Do not disassemble the battery. Contact the distributor for any issues that need repair for more information and proper handling instructions. Incorrect servicing or reassembly may result in a risk of electric shock or fire and void the warranty.
- 2. Never short-circuit DC inputs. Short-circuiting the battery may result in a risk of electric shock or fire and can lead to severe injury or death and/or permanent damage to the unit and/or any connected equipment.
- 3. Use caution when working with metal tools on or around batteries and systems. Risk of electrical arcs and/or short circuiting of equipment can lead to severe injury or death and equipment damage.
- 4. **Beware of high battery current.** Ensure that the battery module breakers and/or on/off switches are in the "open" or "off" position before installing or working on the battery. Use a voltmeter to confirm there is no voltage present to avoid electric shock.
- 5. Do not make any connections or disconnections to the system while the batteries are operating. Damage to system components or risk of electrical shock may occur if working with energized batteries.
- 6. Make sure the battery and rack are properly grounded.
- 7. An installer should make sure to be well protected by reasonable and professional insulative equipment [e.g., personal protective equipment (PPE)].
- 8. Before installing, operating, or maintaining the system, it is important to inspect all existing wiring to ensure it meets the appropriate specifications and conditions for use.
- **9**. Ensure that the battery and system component connections are secure and proper to prevent damage or injuries caused by improper installation.



WARNING: TO REDUCE THE RISK OF INJURY, READ ALL INSTRUCTIONS!

All work on this product (system design, installation, operation, setting, configuration, and maintenance) must be carried out by qualified personnel. To reduce the risk of electric shock, do not perform any servicing other than those specified in the operating instructions unless qualified to do so.

- Read all instructions before commencing installation. For electrical work, follow all local and national wiring standards, regulations, and these installation instructions. All wiring should be in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.
- 2. The battery and system can connect with the utility grid only if the utility provider permits. Consult with the local AHJ before installing this product for any additional regulations and requirements for the area.
- **3**. All warning labels and nameplates on this battery should be clearly visible and must not be removed or covered.
- 4. The installer should consider the safety of future users when choosing the battery's correct position and location as specified in this manual.
- 5. Keep children away from touching or misusing the battery and relevant systems.

The battery is designed to stop charging when reaching the low threshold of 32°F. If charging current is observed when the internal battery temperature is below 32°F, disconnect battery immediately and consult distributor.

DISCLAIMER

EG4 reserves the right to make changes to the material herein at any time without notice. Please refer to <u>www.eq4electronics.com</u> for the most updated version of our manuals/spec sheets.



4. BRIEF INTRODUCTION

Battery Features

- Constant rated output current of 200A
- IP65 all-weather rated, integrated self-heating during low ambient temperatures
- Smart balancing of cells enhancing the battery consistency and the lifespan up to 15 years of life with over 8000 cycles at 80% DOD at 0.5C
- Built-in intelligent BMS with battery voltage, current, temperature, and health management to reduce electrical risks and overheating
- Internal busbars rated to 600 Amps for paralleling multiple batteries and feeding multiple inverters
- Real time monitoring and LCD screen to display battery voltage, current, temperature, SOC in detail
- Integrated E-stop circuit supports emergency stop function with remote Rapid Shutdown Initiator (RSD) or Energy Storage Systems (ESS) disconnect or by inverter's RSD or ESS terminals
- Communicate with inverter using CAN or RS485. Firmware update using RS485
- Plug-and-play cable installation with the use of the 250A weather-tight quick connectors
- Stable, reliable, and maintenance-free battery pack
- Comprehensive safety UL9540A, UL1973 on cell and module level with enhanced onboard fire-extinguishing modules

4.1 PRODUCT DESCRIPTION

The EG4 48V WallMount All Weather 280Ah batteries are ideal for low-voltage residential outdoor energy storage system (ESS) applications. These batteries use lithium iron phosphate (LiFePO₄ or LFP) cells with the highest safety performance and an intelligent Battery Management System (BMS) that can monitor and record the voltage of each cell, along with the current, voltage, and temperature of the module in real-time. The BMS also contains a passive balance function and an advanced battery control method, both of which improve the performance of the battery pack. For enhanced security, the battery has two onboard fire-extinguishing modules. With a design life of more than 15 years, the WallMount is designed to last over 8000 cycles at 80% DOD at 0.5C°.

5. PACKING LIST

The items listed below are <u>included</u> with the purchase:

Figure 1 – Packing List



Battery Overview



Figure 2 – Battery Cross-Sectional View



7

5.1 BATTERY DIAGRAM

It is highly recommended to install the battery with at least 12-inch clearance on each side of the battery (back and front sides excluded) to easily access the side panel.

Side Panel Screws





Figure 3 – Battery (side view)

NOTE: Additional hardware **may** be required to remove the side terminal covers. EG4 recommends a Phillips head screwdriver to remove said screws.

NO.	ITEM	DESCRIPTION	REMARKS
1	Negative Terminals	Connects to negative terminal of Inverter and/or paralleled battery	
2	LCD Screen	Shows battery information	
3	SOC Display	State of Charge LED	
4	Power Switch	Turns BMS on/off	
5	ID/DIP Switch	DIP Switch board for BMS	
6	Positive Terminal	Connects to positive terminal of Inverter and/or paralleled battery	
7	RS485/CAN Port	RS485/CAN Communication Interface	Pin 1 & Pin 8 – RS485_B Pin 2 & Pin 7 – RS485_A Pin 4 – CAN_H Pin 5 – CAN_L
8	Battery-Comm	Parallel battery Communication Port	Pin 1 & Pin 8 – RS485_B Pin 2 & Pin 7 – RS485_A Pin 3 & Pin 6 – E-Stop NO
9	Battery Disconnect Breaker	Turns power supply on/off	Double Pole Single Throw 125 Frame size 125A Rating*



***NOTE:** The battery disconnect breaker is 2 single pole breakers with a singular switch, paralleled together to reach a 250A rating.



6. LOCATION SELECTION AND INSTALLATION

- **Do not put these batteries in series.** The BMS and internal components are not designed to handle this setup, which could cause the modules to fail.
- The WallMount battery is heavy. Use a lift or other equipment to lift and carry the unit.
- The battery can be installed against a flat wall, but the weight of the battery should not be fully supported by the wall. To help with this requirement, the battery comes with pre-installed feet that should be used to allow some of the weight of the battery to rest on the ground.
- If the battery is installed against a wall, EG4 *insists* the wall to be made of non-combustible material. If this is not possible, then the unit **MUST** have a minimum of 2 in. (50.8mm) of clearance from the wall to prevent heat transfer to the wall surface. Also note that whatever mounting solution that is used to grant the 2 in. clearance from the wall **MUST** be a non-combustible material.
- If installing on flat ground as a standalone unit, ensure there is proper drainage on the ground surrounding the battery to maintain integrity of the module over time and prevent damage from flooding. If installing against a wall, ensure at least a 12 in. gap on each side of the unit for adequate airflow and operations.

NOTE: The battery will be shipped with temporary lifting handles for removing the battery from its packaging. See image below for location. EG4 recommends removing the handles before connecting any wiring to the battery.



Always mount the battery in an upright position.

• Ensure at least 12 in. between multiple WallMount batteries and other devices unless it is installed as a part of PowerPro WallMount ESS that includes the EG4-18kPV with the conduit box. In a PowerPro WallMount ESS installation, the conduit box is attached directly to both battery and inverter.

• Please follow NEC and other local codes while installing the product.



The battery can be installed in multiple different configurations:

- 1. Installation without a conduit box (Sec 7.2)
- 2. Installation with a conduit box (Sec 7.3)
- 3. Installation with EG4 18kPV inverter (Sec 7.4)

Refer to Section 7.3 for multiple battery installations with multiple EG4-18kPV units.

6.1 POWERPRO CONDUIT BOX INSTALLATION

The conduit box is a highly recommended accessory for the battery to retain all the cables inside an enclosure for added protection and safety. The conduit box holds both the conduits and wires that are running between the inverter and the battery.

Each conduit box comes with 8 thumb screws that can be used to attach the inverter and the battery.



Figure 6 – Conduit Box Schematics

Step 1: Identify the four screw locations that attach to the battery (**Figure 7**). Place the conduit box on top of the battery and use the provided thumb screws to tighten the conduit box to the battery.



Figure 7 – Conduit Box Thumb Screws





4X THUMB SCREWS

مَوْنَ مَوْنَ

If installing the WallMount as an additional battery or along with non-EG4 18kPV inverter (Section 7.3), please use the plugs to cover the top holes on the conduit box. Refer to **Figure 9**.



Figure 9 - Conduit Box Plug Location



CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!

	Mounting Instructions				
1.	Place mounting bracket on wall at proper mounting height (min. 28.0625 in) from the ground; use a level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used.				
	<i>Note:</i> The mounting bracket at 28.065 in. from the ground makes the battery sit on the ground.				
2.	Secure mounting bracket to the wall using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface.				
	Note: If not mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lbs, please ensure full mounting support.				
3.	Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 10)				
	Note: The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment				
4.	Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.				

6.2 INSTALLATION WITHOUT A CONDUIT BOX



6.3 INSTALLATION WITH A CONDUIT BOX

Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware. Refer to Section 7.1 for the conduit box installation instructions.



CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!

	Mounting Instructions
1.	Place mounting bracket on wall at proper mounting height (minimum 28.0625 in) from the ground; use a level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used.
	Note: The mounting bracket at 28.065 in. from the ground makes the battery sit on the ground.
2.	Secure mounting bracket to the wall using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface.
	Note: If not mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lb, please ensure full mounting support.
З.	Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 12)
	<i>Note:</i> The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment
4.	Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware.
5	Finally, properly around the battery attaching a grounding conductor to the M6 grounding scrow

5. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.



Steps 1 & 2

Figure 11 – WallMount Installation with Conduit Box Steps 1 & 2



Figure 12 – WallMount Installation with Conduit Box Steps 3, 4 & 5

CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!

Mounting Instructions with EG4 18kPV (See diagrams on following pages) **Note:** If **not** mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lb, please ensure full mounting support. Place mounting bracket on wall at proper mounting height (Min. 28.0625 in.) from the ground; use a 1. level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used. *Note:* The mounting bracket at 28.065in from the ground makes the battery sit on the ground. Align the provided X-bracket with the holes on the mounting bracket and secure both to the wall, using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface. The X-bracket will be behind the mounting plate, against the wall. Using the X-bracket as a guide, attach the EG4 18kPV mounting bracket using the appropriate З. hardware required for the mounting surface. Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up 4. and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 14). Note: The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment 5. Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware. Attach the 18kPV to the inverter mounting bracket making sure that the holes of the inverter align 6. with the conduit box and secure to each other with the included hardware. 7. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.



Figure 13 – WallMount Installation with Conduit Box & 18kPV Steps 1 & 2

6.4 WITH EG4 18KPV INVERTER

Step 3 (back view)

습 0 0 0 0 0 0

Step 4 (back view)



Figure 14 – WallMount Installation with Conduit Box & 18kPV Steps 3 & 4 $\,$



Figure 15 – WallMount Installation with Conduit Box & 18kPV Steps 5 & 6



Final - Front View w/ Dimensions

Figure 16 – WallMount Installation with Conduit Box & 18kPV Final

7. GENERAL INSTALLATION

Be sure the battery packs are powered "OFF" before making/removing any connections.

Use the two included sets of 2/0 AWG (70mm) outdoor rated positive and negative battery cables with the outdoor rated connectors. The connectors will "click" when seated properly.

Note: To remove the circular connector installed on the battery, first press the release button on the side of the connector, then slowly pull until the connection is broken.

When paralleling batteries, use one set of 2/0 AWG (70mm) positive and negative battery cables with outdoor rated connectors on both ends to connect battery to battery. These cables are available from the distributor as a paralleling kit.

When paralleling batteries, use a communication cable to attach the master battery to additional batteries for battery-to-battery communication. This cable is also available from the distributor in the paralleling kit.



NOTE: When installing multiple batteries or adding a battery to an existing rack, please ensure all batteries are charged to 100% before paralleling together. This step is crucial to optimize battery performance and ensure proper operation.

7.1 BATTERY PARALLELING GUIDE

- 1. Ensure all battery breakers and BMS are OFF.
- 2. Set the address code of each battery according to the DIP Switch ID Table (see <u>Section 10.1</u>: <u>DIP Switch ID Table</u>), making sure there are no duplicate addresses.
- 3. Set up communication between the batteries via the "*Battery-Comm*" ports of each battery. Use the paralleling kit communication cable to daisy chain all paralleled batteries in the bank together. See diagram below for example.



Figure 17 – Battery Communication Ports

4. The battery with DIP Switch ID 1 (referred to as the master) connects to the inverter via a properly pinned communication cable (depending on inverter) using the RS485/CAN port.

- 5. Install battery paralleling cables between batteries. Refer to <u>Section 8.2 Battery Cable</u> <u>Connections</u> for battery cable connection diagram examples.
- 6. Once all cable connections are completed and the system is ready to be commissioned, power on each battery breaker and BMS ON/OFF switch one at a time beginning with the master battery.

7.2 BATTERY CABLE CONNECTIONS

The following battery cable connection diagrams are examples using the internal busbars to parallel the batteries together and attach the inverter(s) to the batteries. When relying on the internal busbars, up to 3 batteries are supported in parallel when connected to a single inverter, 4 batteries in parallel when connected to 2 inverters, or up to 5 batteries in parallel when connected to 3 inverters.

Systems with more batteries than these configurations **require** the use of an external fused positive busbar and an unfused negative busbar rated at a minimum of 200A per battery. Each fuse should be a maximum of 250A. Alternatively, larger systems could rely on the 18kPV's ability to draw from different battery packs while still paralleling inverters rather than utilizing external busbars.

The maximum recommended number of paralleled 18kPV inverters is 6. If this approach is used, we recommend a ratio of 3 batteries per pack controlled by each 18kPV inverter. Separating packs is only recommended if each pack's average SOC is monitored over time and does not diverge by more than 10%. Common busbars are superior to separating battery packs but it may be difficult to source fused positive busbars rated to greater than 1800 Amps. This translates into separating packs larger than 9 batteries. *Refer to NEC code and the local AHJ for exact requirements*



NOTE: In the following diagrams, units are spaced 12 in. apart. Local regulations may require a larger minimum battery spacing. Check with the local AHJ for these requirements. If longer parallel cables than are available in the optional paralleling kit are necessary, please check with the distributor for availability.



Note: To comply with the UL9540 listing for this integrated battery, conduit box, and inverter system, the batteries must be wired as shown using the supplied inverter to battery cables. An additional paralleling kit is required for each additional paralleled battery (sold separately).

Caution: To minimize voltage drop in the wire, the battery cables should maintain optimum length. The 53.1 in. cables from the "parallel kit" are sufficient to daisy chain the batteries.

Figure 182 - (1) 18kPV Inverter with (1) WallMount

7.3 ADDITIONAL CONFIGURATIONS



Figure 19 - (1) 18kPV Inverter with (2) WallMount



Pro Tip: One EG4-18kPV and a minimum of 2 WallMount units is the recommended configuration to maximize the system's functionality.



Figure 20 – (1) 18kPV Inverter with (3) WallMount







Figure 22 – (2) 18kPV Inverter with (3) WallMount



Figure 23 – (2) 18kPV Inverter with (4) WallMount



Figure 24 – (3) 18kPV Inverter with (3) WallMount



Figure 25 – (3) 18kPV Inverter with (4) WallMount

8. EMERGENCY STOP (RSD, ESS DISCONNECT)



To inverter, RSD Initiator, or ESS Disconnect (Inverter recommended if compatible with inverter's RSD system) Normally Open (NO) or Normally Closed (NC) contacts depending on inverter

To Inverter, RSD Initiator, or ESS Disconnect (Inverter recommended if compatible with Inverter's RSD system) Normally Open (NO) Contacts Depending on the Inverter

Figure 26 – Emergency Stop

The optional ESS disconnect can be used to shut down all batteries and inverters (if equipped) with the push of a button.

When paralleling multiple batteries, the ESS disconnect only needs to have connections made with the master battery.

This integrated safety feature ties directly into the battery communication system via an open Battery-Com port using a standard Cat-5/6 ethernet cable.

Pins 3 & 6 are used to communicate the emergency stop information to the batteries once the stop button is pressed.

If the inverter is equipped with rapid shut down (RSD) capabilities, the emergency stop feature can be used to initiate this function. Check with the local AHJ and NEC code for compliance.

9. BATTERY COMMUNICATIONS

Each EG4 battery is designed with the end-user in mind, displaying as much information as possible in the simplest manner. EG4 Electronics includes the option of connecting the battery to PC software to monitor the module status. This allows the user to see and understand exactly what the battery is doing as well as troubleshoot if problems arise.

Note: The master battery will communicate directly with the system via the RS485/CAN port.

9.1 DIP SWITCH ID TABLE

EG4 batteries interface with an inverter by designating a "Master" battery (DIP switch ID No. 1). The available ID codes range from 1–64. The battery will connect directly to the inverter via a RS485 battery communications cable or a standard CAT 5, 5e, or 6 cable for closed loop communications with supported non-EG4 inverters using CAN bus protocol.



If paralleling multiple batteries, all DIP switch settings **must** be different from each other. This allows all equipment to see each battery in the bank separately. For best practice, place IDs in sequence starting with ID 1 as the master battery.



Figure 27 – Dipswitch ID Table

9.2 LCD SCREEN

Each module has a built-in HD LCD touch screen used to display important information about the cells including voltage, current, temperature, SOC, among others.

Button Description

There are 4 function buttons below the display with detailed descriptions, as shown in the table below.



Number	Description
1	Up
2	Down
3	Return
4	Enter



Waking up the LCD screen

Press any key to wake up the screen when the power is on, and the information will be shown on the display.

Number	Description
1	Battery Name
2	Status
3	Voltage
4	Current
5	System Date & Time
6	State of Charge



Figure 29 – LCD Screen Features

Temperature

31°C

30°C

Duese "Cuteu" au tha			
Cell Voltage page to	Temp		
view the	PCB Te	mp: 32°C	
temperature	Cell Temp:		
PCB and individual	31°C	31°C	
cells (shown in °C)			

Figure 30 – Battery Temperature Information

IMPORTANT: Only the master battery (Address 1) should be set to the inverter protocol; all other batteries must have unique addresses starting at address 2 and ascending in chronological order.

		Page 1			Page 2	
Check individual cell voltage by pressing the " <i>Enter</i> " button on the main page of	Ce 1:3332	II Voltage(n 2:3300	יV) 3:3333	Ce 10:3332	ell Voltage(m 11:3300	V) 12:3333
the LCD screen (shown in mV). There are 2 pages.	4:3334	5:3333	6:3334	13:3334	14:3333	15:3334
Pressing "Up" and "Down" changes the page.	7:3333	8:3334	9:3333	16:3334		

Figure 31 – Battery Cell Information

9.3 COMMUNICATION PROTOCOL SELECTION

Protocol Change/Selection Procedure

- 1. Power off all battery DC breakers and BMS power buttons.
- 2. The inverter protocol can only be changed with the master battery temporarily set to address 64 (all switches ON. After the dipswitch is changed, restart the battery (with only the BMS power button) for the settings to take effect. (See image on right.)
- 3. On the master battery, press and hold the "*Return*" key for 5 seconds and release to enter the "*Protocol Setting*" menu.



4. Select the corresponding RS485 program or CAN program, and press Enter.

RS485 Protocol - P01		CAN Protocol - P01	
P01-EG4 P02-GRW P03-LUX P04-SCH		EG4/LUX P02-GRW P03-SLK P04-DY P05-MGR P06-VCT P07-LUX P08-SMA	
	/		▼

Protocol #	Manufacturer
P01-EG4	EG4
P02-GRW	Growatt
P03-LUX	Luxpower
P04-SCH	Schneider

Protocol #	Manufacturer
P01-EG4/LUX	EG4/LUX
P02-GRW	Growatt
P03-SLK	Sol-Ark
P04-DY	Deye
P05-MGR	Megarevo
P06-VCT	Victron
P07-LUX	Luxpower
P08-SMA	SMA

Figure 32 – Battery Protocol Selection

- 5. Press the "Return" Θ key to return to the main interface.
- 6. Change the master DIP switch address back to address 1. (See image on right.)
- 7. Power cycle the master battery, and the BMS will correspond to the protocol selected.

ON DIP 1 2 3 4 5 6 ID:1

"About" Screen

When single-tapping the battery's return key, the "About" page will populate. Here the user can check which Inverter protocol the battery is set to, BMS version numbers, and Firmware version numbers.

See image to the right for an example.

About	
Protocol:	
RS485: P01-EG4	
CAN: EG4/LUX	
Version:	
BMS: Z02T10	
LCD: V1.1.0	

Figure 33 – "About" Display

10. OPERATION GUIDE

10.1 BMS TOOLS INSTALLATION AND INTERFACING

The PC software "*BMS Tools*" provides real-time battery analysis and diagnostics. The battery cannot communicate with BMS Tools and a closed loop inverter at the same time. The steps outlined below will walk through the initial set up of BMS Tools.

- 1. Using an RS-485 (RJ45 Pins 1-B, 2-A) to USB-A cable, connect to the RS-485 port of the battery and then to a USB-A port on a Windows computer.
- 2. Set the battery's dipswitch to ID: 64. (all dips ON)
- 3. Power on the battery pack.
- 4. Confirm the RS485 cable's COM is set correctly in the BMS Tools program. Refer to the Device Manager on the PC for more information.

BMS_TOOLS V1	.0					- 0 ×
COM COI	M30 V Refresh	Baud Rate 115200 V				ID: 1 V Start Monitoring
BMS Monitoring	BMS Parameter Historical Record BMS Datalog C	ommunication				
Model Information	on		Error Statu	5	Warn Status	Protect Status
				Voltage Error	Pack OV	Pack OV
Com State	Offline Model			Temperature Error	Cell OV	Cell OV
Version	SN			Current Error	Pack UV	Pack UV
				Cell Unbalance	Cell UV	Cell UV
Battery Informat	ion				Charge OC	Charge OC
Status	Heater	soc	% SOH	%	Discharge OC	Discharge OC
Voltage	V Current	A Capacity	AH Remain C	АН	Temp Anmaly	Temp Anmaly
Max Vol	V Min Vol	V Vol Diff	V Max C-C	A	MOS OT	MOS OT
Max Temp	°C Min Temp	°C Temp Diff	°C Cell Num		Charge OT	Charge OT
Temperature Inf	formation(°C)				Disharge OT	Disharge OT
					Charge UT	Charge UT
PCB Temp		Ambient Temp			Discharge UT	Discharge UT
					Low Capacity	Float Stoped
Temp01	TempU2	Temp03	Temp04		Other Error	Discharge SC
Voltage(V)						
Cell01	Cell02	Cell03 Cell04	Cell05	Cell06	Cell07	Cell08
Colling	Collin	Coll12	Coll12	Call14	callts	Callié
Cellos	Cento	Centr	Cen13	Cen14	Centry	Centro

Figure 34 – BMS Tools Comm Selection

5. Change the Baud Rate to 9600.

BMS_TOOL	.S V1.0					- 0
Monitor Statu COM	IS COM30 V Refresh	Baud Rate 9600 V				ID: 1 V Start Monitoring
BMS Monitor	ing BMS Parameter Historical Record BMS Datalog Communica	tion				
Model Infor	rmation		Error Statu	-	Warn Status	Protect Status
				Voltage Error	Pack OV	Pack OV
Com State	Offline Model			Temperature Error	Cell OV	Cell OV
Version	SN			Current Error	Pack UV	Pack UV
				Cell Unbalance	Cell UV	Cell UV
Battery Info	ormation				Charge OC	Charge OC
Status	Heater	SOC	% SOH	96	Discharge OC	Discharge OC
Voltage	V Current	A Capacity	AH Remain C	AH	Temp Annaly	Temp Anmaly
Max Vol	V Min Vol	V Vol Diff	V Max C-C	A	MOS OT	MOS OT
Max Temp	°C Min Temp	°C Temp Diff	°C Cell Num		Charge OT	Charge OT
Temperatu	re Information(°C)				Disharge OT	Disharge OT
					Charge UT	Charge UT
PCB Temp	Ambient T	emp			Discharge UT	Discharge UT
					Low Capacity	Float Stoped
1 emp01	Tempuz	Temp03	Temp04		Other Error	Discharge SC
- Voltage(V)						
Cell01	Cell02 Cell03	Cell04	Cell05	Cell06	Cell07	Cell08
Cell09	Cell10 Cell11	Cell12	Cell13	Cell14	Cell15	Cell16
					, <u>L</u>	

Figure 35 – BMS Tools Baud Rate

6. Change the "ID" to 64.

BMS_TOOLS	5 V1.0						- 0 ×
Monitor Status	COM30 V Refresh	Baud Rat	9600 ~				ID: 64 V Start Monitoring
Model Inform	nation	Datalog Communication		Erro	r Status	Warn Status	Protect Status
					Voltage Error	Pack OV	Pack OV
Com State	Offline Model				Temperature Error	Cell OV	Cell OV
Version	SN				Current Error	Pack UV	Pack UV
					Cell Unbalance	Cell UV	Cell UV
Battery Infor	mation					Charge OC	Charge OC
Status	Heater		SOC	% SOH		% Discharge OC	Discharge OC
Voltage	V Current		A Capacity	AH Remain C	A	AH Temp Annaly	Temp Anmaly
Max Vol	V Min Vol		V Vol Diff	V Max C-C		A MOS OT	MOS OT
Max Temp	°C Min Temp		°C Temp Diff	°C Cell Num		Charge OT	Charge OT
Temperatur	e Information(°C)					Disharge OT	Disharge OT
PCB Temp		Ambient Temp				Charge UT	Charge UT
						Lew Creativ	Discharge UI
Temp01	Temp02		Temp03	Temp04		Other Error	Discharge SC
- Voltage(V)							
Cell01	Cell02	Cell03	Cell04	Cell05	Cell06	Cell07	Cell08
Colleg	Collin	Collin	Call12	Call12	Callita	Collins	collie
Cell09	Cento	Centi	Cell12	Cents	Cell14	Cents	Cento

Figure 36 – BMS Tools ID Selection

7. Select, "Start Monitoring".

BMS_TOOL	S V1.0					- 0 ×
Monitor Statu	5					
СОМ	COM30 V Refresh	Baud Rate 9600 V				ID: 64 V Start Monitoring
BMS Monitori	Ing BMS Parameter Historical Record BMS Datalog	Communication				
Model Infor	mation		En	ror Status	Warn Status	Protect Status
Com State	Offline Model		-	Voltage Error	Pack OV	Pack OV
				Temperature Error	Cell OV	Cell OV
Version	SN			Current Error	Pack UV	Pack UV
			-	Cell Unbalance	Cell UV	Cell UV
Battery Info	rmation				Charge OC	Charge OC
Status	Heater	SOC	% SOH	%	Discharge OC	Discharge OC
Voltage [V Current	A Capacity	AH Remain C	AH	Temp Anmaly	Temp Anmaly
Max Vol	V Min Vol	V Vol Diff	V Max C-C	A	MOS OT	MOS OT
Max Temp	°C Min Temp	°C Temp Diff	℃ Cell Num		Charge OT	Charge OT
Temperatur	re Information(°C)				Disharge OT	Disharge OT
					Charge UT	Charge UT
PCB Temp		Ambient Temp			Discharge UT	Discharge UT
(Low Capacity	Float Stoped
Temp01	Temp02	Temp03	Temp04		Other Error	Discharge SC
-Voltage(10						
voluge(v)						
Cell01	Cell02	Cell03 Cell04	Cell05	Cell06	Cell07	Cell08
Cell09	Cell10	Cell11 Cell12	Cell13	Cell14	Cell15	Cell16

Figure 37 – BMS Tools Monitoring Initiation

8. The "Com State" will now change from "Offline" to "Connected." The system will now monitor the battery's values in real time.

ir Status													
сом со	M30 \vee Refresh		Baud Ra	te 9600 🗸								ID: 64 $$	Stop Monito
Monitoring	BMS Parameter Histo	rical Record BMS Data	log Communication										
lel Informati	on						Error Status			Warn Status		Protect Status	
								Voltage Error		Pack OV		P	ack OV
n State	Online	Model		LFP-51.2V100Ah-V1	0		Te	mperature Error		Cell OV			cell OV
rsion	Z02T15	SN		2023-10-13				Current Error		Pack UV		P	ack UV
								Cell Unbalance		Cell UV			Sell UV
ry Informa	tion									Charge OC		Ch	arge OC
tus	Standby	Heater	Heat off	SOC	99	% SOH		100	%	Discharge OC	:	Disc	harge OC
sge	53.86	V Current	0.00	A Capacity	100	AH Remain	с	99	AH	Temp Anmal	/	Tem	1p Anmaly
Vol	3.370	V Min Vol	3.365	V Vol Diff	0.005	V Max C-	c	5	A	MOS OT		M	105 OT
Temp	35	°C Min Temp	35	℃ Temp Diff	0	°C Cell Nu	n	16		Charge OT		Ch	arge OT
erature In	formation(°C)									Disharge OT		Dist	harge OT
										Charge UT		Ch	arge UT
'emp	3	35	Ambient Temp		34					Discharge UT		Disc	tharge UT
-01	25	Tomp07	25	Tome02	25	Tomo		24		Low Capacity	·	Floa	st Stoped
		Tempoz	27	Tempos		rempo	•	34		Other Error		Disc	harge SC
ge(V)													
1	3.367 Cell	3.369	Cell03 3.	368 Cell04	3.366	Cell05	3.366	Cell06	3	.366 Cell07	3.365	Cell08	3.367
	3.365 Cell1	0 3.367	Cell11 3	366 Cell12	3.366	Cell13	3,366	Cell14	3	.370 Cell15	3,366	Cell16	3,368

Figure 38 – BMS Tools Real-Time Monitoring

11. BATTERY CHARGING

Charge cycle

Ensure the proper settings are set on the charge controller and/or inverter being used to avoid overcharging or damaging the module. (*Refer to Section 1: Technical Specifications Table for a full list of charging/discharging parameters.*)



It is normal for LFP batteries that have their own internal BMS and that are wired in parallel to demonstrate a wide variety of SOC readings during any given charge or discharge cycle. **Variations of up to 10% are common.** This is not cause for concern or indication that the module is providing less than the maximum capacity. This is caused by even slight variations in wiring resistance to each battery, internal resistance, temperature differences, and even variations in each cell. Even a slight variation causes one battery to take more of the load or charge for a short time. Over the duration of the discharge or charge cycle, this will balance out with the lagging battery then taking the load or charge at the other end of the cycle resulting in recovering the full listed kWh capacity of the pack. The voltage differences created as batteries diverge in SOC will eventually cause them to converge at some point in the cycle.



NOTE: When installing multiple batteries or adding a battery to an existing rack, please ensure all batteries are charged to 100% before paralleling together. This step is crucial to optimize battery performance and ensure proper operation.

11.1 BATTERY PERFORMANCE CURVES



Figure 39 – Lithium Battery Performance Curves

Time (month)

# of 18kPV	Rec. Max. Charge Current (230A per inverter)	(1) Battery Inverter Setting – Amps per Battery	(2) Batteries Inverter Setting – Amps per Battery	(3) Batteries Inverter Setting – Amps per Battery	(4) Batteries Inverter Setting – Amps per Battery
1	230A	160 – 160A	230 – 160A	230 – 77A	230 – 58A
2	460A	80 – 160A	160 – 160A	230 – 153A	230 – 115A
3	690A	53 – 159A	107 – 160A	160 – 160A	213 – 160A

Recommended Charge Current Settings for Paralleled Batteries on Paralleled 18kPVs

Please note that if the battery firmware is updated to allow 200A maximum charge, the internal thermal sensors will throttle the charge current to what the BMS deems necessary to prevent overheating.

12. TROUBLESHOOTING, MAINTENANCE & DISPOSAL

12.1 INTRODUCTION TO THE BMS

The BMS (Battery Management System) is intended to safeguard the battery and battery cells against a variety of situations that could damage or destroy system components. This protection also aids in keeping the battery and battery cells operational for a greater number of life cycles. Each EG4 battery is specifically configured to ensure peak performance and operation with any system.

12.2 BMS PROTECTION

PCB temperature protection

The BMS will ensure that the Printed Circuit Board (PCB) does not overheat. This is the component that houses most of the "brains" of the battery. This feature will turn off the battery if it begins to overheat.

Cell balance protection

Cell balance ensures that each cell is within a specific voltage range of each other. Cell balance is crucial for ensuring that the battery is operating properly for its lifespan. This is always done automatically.

Environmental temperature protection

It may be dangerous to attempt using the battery in extreme heat or cold. Continued operation in these conditions may result in permanent damage to the battery module and its components. To prevent this, the BMS is designed to measure the temperature while charging/discharging and will shut down the battery to prevent damage.

Voltage protection

The BMS is designed to continuously monitor the voltage of each individual cell and ensure that they are not over/undercharged.

Current protection

The BMS is designed to constantly monitor the charge/discharge amperage and has built-in safeguards against exceeding specific parameters. These include built-in timers that shut off quickly in the event of short circuits, extremely high amperage and delayed shut down for amperage that is only slightly above the maximum capacity.

12.3 TROUBLESHOOTING

Alarm Description and Troubleshooting

When the ALM light on the battery control panel is on, it means that the battery has given an alarm or has been protected from potential damage. Please check the cause of the failure through the app or BMS Tools and take appropriate measures or go directly to the battery site to troubleshoot. BMS Tools alarms are shown in the table below:

STATUS	NAME	DEFINITION	ACTION
	Pack OV	Pack over-voltage	Module needs to be discharged to lower its voltage.
	Cell OV	Cell over-voltage	Check individual cell voltage in BMS Tools.
	Pack UV	Pack under-voltage	Module needs to be charged.
	Cell UV	Cell under-voltage	Check individual cell voltage in BMS Tools.
	Charge OC	Charge over-current	Incoming current needs to be reduced.
	Discharge OC	Discharge over-current	Discharge current is too high; lower loads.
Warning/	Temp Anomaly	Temperature anomaly	Check ambient and module temperature.
TOLECT	MOS OT	MOSFET over- temperature	BMS temperature is too high. Power off module and cool down location.
	Charge OT	Charge over-temperature	Power off module and cool down location.
	Discharge OT	Discharge over- temperature	Power off module and cool down location.
	Charge UT	Charge under- temperature	Power off module and warm up location.
	Discharge UT	Discharge under temperature	Power off module and warm up location.
Warning	Low Capacity	Low battery capacity	Module needs to be charged.
Warning	Other Error	Error not listed	Contact the distributor
Protect	Float Stopped	Float Stopped	Contact the distributor
Protect	Discharge SC	Discharge short circuit	Discharge current is too high, turn BMS and breaker off and back on to reset. Lower loads

Warning and protect status definitions

NOTE: The "Historical Record" tab can indicate what occurred with the module before entering a warning or protection state. It is recommended to export this data into a text (.txt) file to provide to the distributor for any additional troubleshooting assistance.

NOTE: If any of the warnings or faults from both tables persist, please contact the distributor for additional troubleshooting steps.

Other common faults and solutions

Fault	Analysis	Action
Inverter communication failure	Check communication port connection, and battery ID setting.	Input proper "host" battery DIP switch address, and power cycle the battery.
No DC output	Open breaker, or battery voltage is too low.	Check battery breaker or charge the battery.
Power supply unstable	Battery capacity is not at full power.	Check for proper battery cable connection.
Battery cannot be charged fully	DC output voltage is below the minimum charge voltage.	Check the charging settings on the inverter to ensure they match battery requirements.
ALM LED always on	Short circuit	Disconnect the power cable and check all cables.
The battery output voltage is unstable.	Battery management system does not operate normally.	Press the reset button to reset the battery, then reboot the system.
ALM LED flashes 20 times with SOC1 LED on.	Unbalanced voltage within a cell	Deep discharge the battery bank (<20% SOC), then charge battery bank fully.
ALM LED flashes 20 times with SOC2 LED on.	Unbalanced temperature	Contact the distributor.
ALM LED flashes 20 times with SOC 3/4 LED on.	BMS damaged	Contact the distributor.
Different SOC value of batteries in parallel operation.	No issue	Deep discharge the battery bank (<20% SOC), then charge battery bank fully.
Low voltage protection with no LED on	BMS is in low voltage protection, and is in sleep mode	Contact the distributor.
Deeply discharged with " <i>RUN</i> " LED on	The battery voltage is too low to start BMS.	Contact the distributor.

12.4 BATTERY END OF LIFE

The EG4 48V battery is designed to last for *more than 15 years* when used correctly. We have worked tirelessly to ensure that our batteries will maintain a charge after thousands of cycles. However, when it does come time to retire the battery, there are a few things to consider.

Lithium iron phosphate batteries are considered a hazardous material and should not be disposed of by simply placing them in the trash. There are several websites and organizations that will accept this battery to recycle at little to no cost to the user. At EG4, we understand that we are working with customers across the United States and the world. Our recommendation is to go online and search the term "Lithium Battery Disposal Near Me." There will likely be an assortment of organizations that can safely dispose of LFP batteries.

We recommend calling ahead of time to ensure that the location is still open and accepting material.

If users are unable to locate a disposal location safely, EG4 is here to help. Before dumping the battery or disposing of it incorrectly, please contact our customer service team for assistance.

13. EG4 10 YEAR LIMITED WARRANTY

The warranty must be registered within the first year of purchase to remain valid. If users choose not to register the product, the warranty may be invalidated. This limited warranty is to the original purchaser of the product and is not transferable to any other person or entity. All BMS and cell exchanges are covered throughout the warranty period. If a full replacement warranty is needed the warranty is prorated 1/9th per year after the first year at the current retail pricing.

Please navigate to https://eg4electronics.com/warranty-registration/ to register the warranty.

13.1 WARRANTY EXCLUSIONS

Under this limited warranty, EG4® Electronics has no obligation to the product if it is subject to the following conditions, including but not limited to:

- Damages incurred during installation or removal
- Damages caused during mishandling of product
- Inappropriate environmental exposure
- Damages caused by improper maintenance
- Unauthorized tampering, altering, and/or disassembly of product
- Using the product for purposes other than those intended by the manufacturer
- Lightning, Fire, Flood, or Acts of God
- Any product whose serial number has been altered, defaced, or removed

The equipment sold by EG4 Electronics is designed to be installed only by licensed, trained, and insured solar electrical installation professionals. We strongly advise customers to seek the assistance of such a professional to implement these products, and we make no warranty of the purchaser's safety, success of equipment implementation, or compliance with local codes and regulations.

EG4 Electronics disclaims all additional warranties, expressed or implied, including but not limited to, any implied warranty with respect to the accuracy or completeness of the information they disseminate and /or fitness of the materials sold for a particular purpose. No warranty may be created or extended by sales or promotional materials on these items. Each party hereby irrevocably waives its rights to trial by jury in any action or proceeding arising out of this agreement or the transactions relating to its subject matter. All installation advice provided by EG4 before, during, or after purchase of solar equipment is purely for the purpose of general concept education and must not replace the expertise of a licensed and trained solar specialist. The customer agrees to full indemnification for EG4 henceforth from any legal recourse relating to and arising out of losses, direct or consequential, from the installation of the products purchased by the customer more than the value of the equipment purchase price.

14. STORAGE

Please follow these instructions for the safe storage of the unit to maintain the longevity of the battery, if choosing not to install the product immediately after purchasing or unpacking the box.

There are a few steps that can be taken to ensure that batteries are stored safely and in a state that will ensure they are not damaged during storage. The steps are detailed below.

Battery State

The state of the battery when placed into storage will affect how long it can be stored, as well as the battery's condition when it is brought out of storage. EG4® recommends that each battery is brought to a 50% SOC (state of charge) before placing it in storage. Lithium batteries will lose a certain percentage of their total charge while in storage, depending on how long they are stored and the conditions they are stored in. We recommend recharging the batteries after 8 – 9 months in prolonged storage.

Environmental Factors

The environment the battery is stored in can greatly affect the health of the battery. **For best results**, the temperature should range between 33°F and 90°F (0.6°C and 32°C). Mount the battery in a location where it is not exposed to direct rain, standing water and **ensure the battery is mounted on non-***combustible material.* Keep the battery *away from direct sunlight*. Store the batteries away from combustible materials.

NOTES



CONTACT US

support@eg4electronics.com (903) 609-1988 www.eg4electronics.com